
To prime the Black Berkey™ Element:

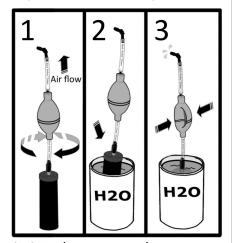


- 1. Attach pump to element.
- 2. Immerse element into water source.
- 3. Squeeze pump, allow it to expand, & repeat until water flows from other end.

If attached properly, air will exit the opposite end upon squeezing the pump. If not, switch attachments.

# Black Berkey Primer 100%

To purge the Black Berkey™ Element:

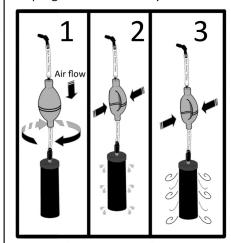

- 1. Attach pump to element.
- 2. Squeeze pump, allow it to expand, & repeat until desired, or
- 3. Until element is dry to touch.

If attached properly, air/water will exit the carbon body of the Black Berkey™ Element upon squeezing the pump. If not, remove black attachments from tubing & switch sides.


## Care of the Black Berkey Primer™:

- Rinse components after use and allow each to air dry before re-assembly and storage.
- Store in a cool/dry location, closed container, and avoid exposure to extreme temperatures.
- This product contains small parts and presents a choking hazard. Keep out of reach of children.
- Exposure to direct sunlight (UV) will decrease product lifespan.

Whenever processing water for human consumption, wash hands & secure a clean workspace.

Download free copies of these instructions: **BerkeyWater.com** 

### **Parts & Assembly**

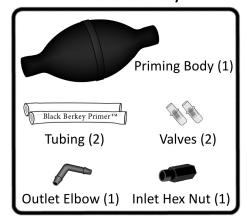

The Black Berkey Primer™ allows users of Berkey® systems to do two things:

- 1. Prime the Black Berkey™ Elements saturate the elements with water to prepare them for immediate use, and
- 2. Purge the Black Berkey™ Elements use air to clear contaminants from the micro-pores of the proprietary carbon block, thereby extending its lifespan, improving the flow of water, and saving time on drying prior to storage.

# Priming Setup



By paying attention to the direction of the valves, changing functions is as easy as switching sides of the Elbow & the Hex Nut.

# **Purging Setup**

